

FIG. 1

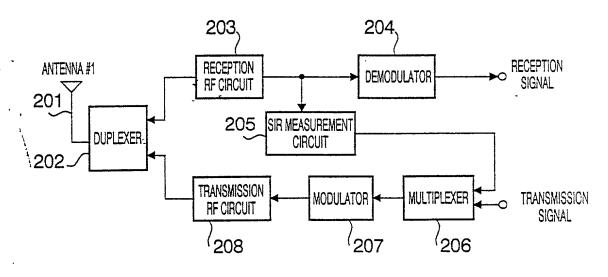


FIG. 2

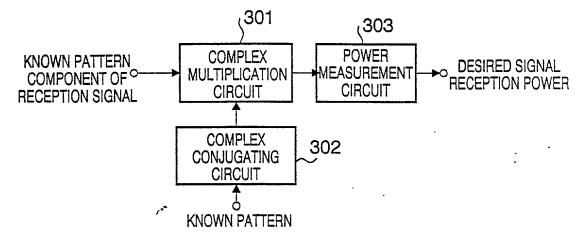


FIG. 3

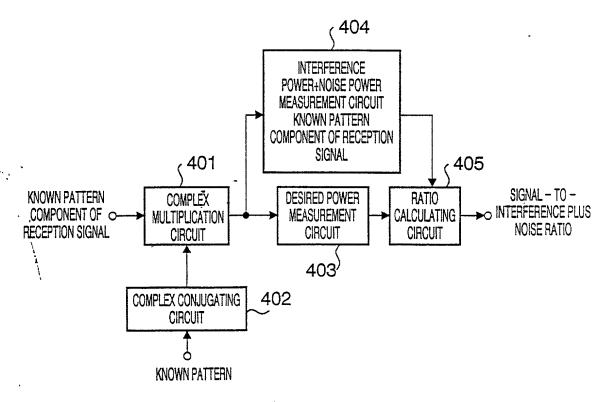


FIG. 4

FIG. 5

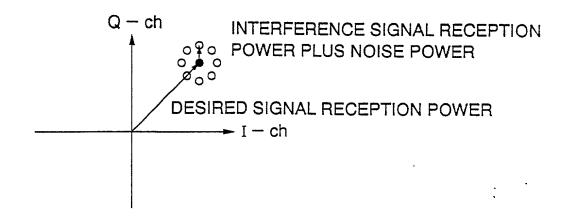


FIG. 6

SYMBOL MESSAGE INFORMATION
----------------------------

FIG. 7


PILOT SYMBOL	FLAG	MESSAGE
-----------------	------	---------

(a) WHEN FLAG = MESSAGE


PILOT SYMBOL	FLAG	CONTROL INFORMATION
-----------------	------	---------------------


(b) WHEN FLAG = CONTROL INFORMATION



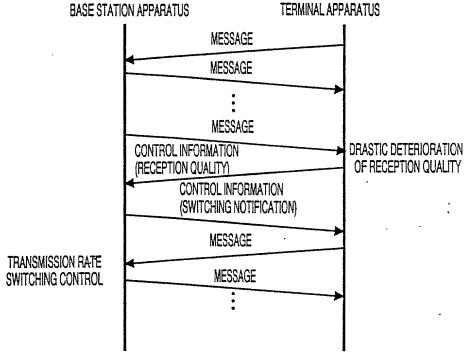


WHEN TERMINAL APPARATUS STARTS TO REPORT UPON RECEPTION OF RECEPTION QUALITY MEASUREMENT RESULT

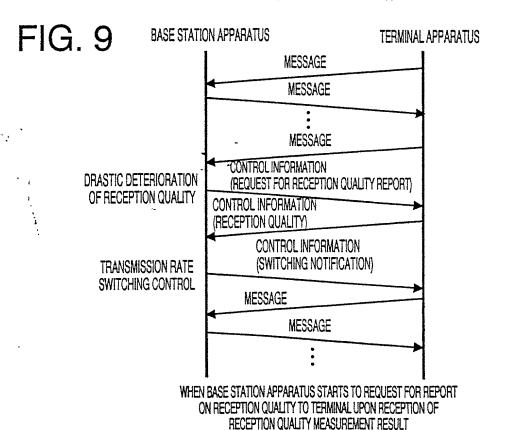

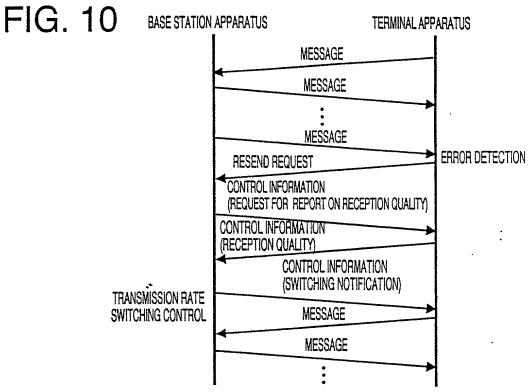

WHEN BASE STATION APPARATUS STARTS TO REQUEST FOR REPORT ON RECEPTION QUALITY TO TERMINAL UPON RECEPTION OF RESEND REQUEST FROM TERMINAL

FIG. 11

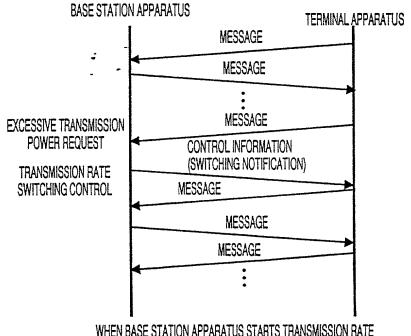

WHEN BASE STATION APPARATUS STARTS TRANSMISSION RATE SWITCHING CONTROL BASED ON OWN TRANSMISSION POWER

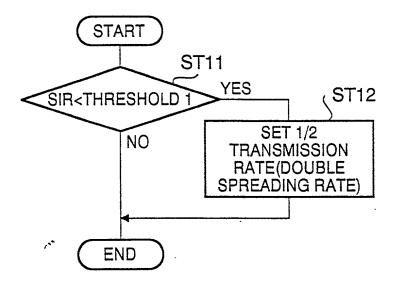


FIG. 12

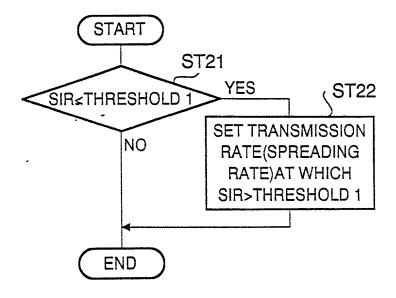
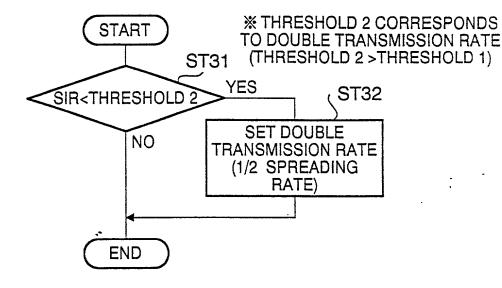


FIG. 13



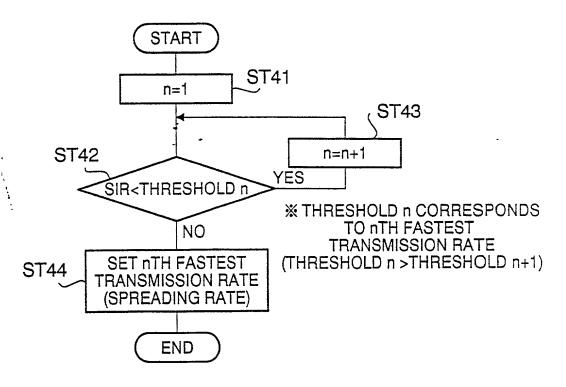


FIG. 15

FIG. 14

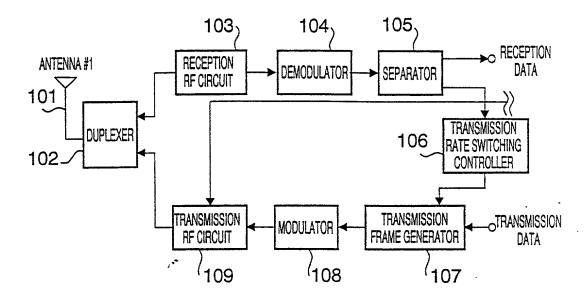


FIG. 16

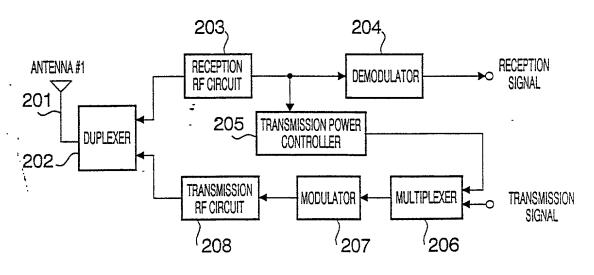


FIG. 17

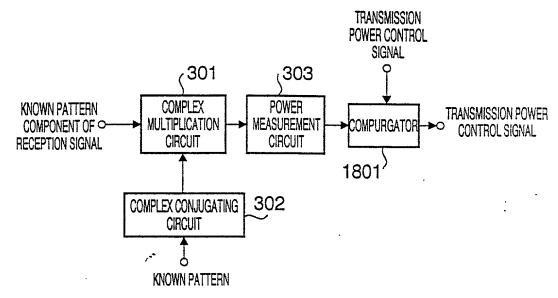


FIG. 18

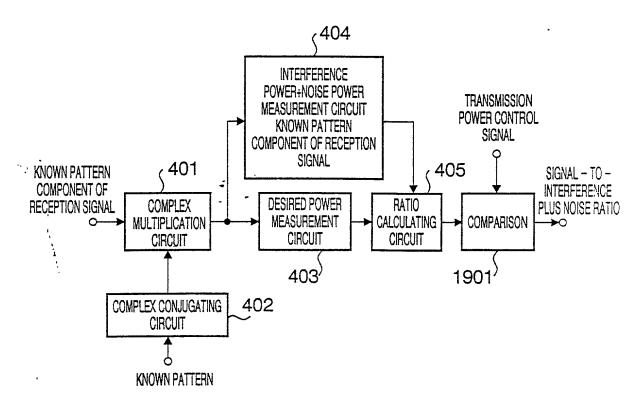


FIG. 19

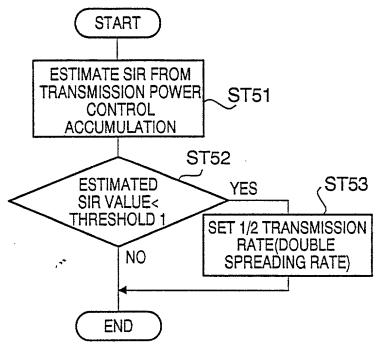


FIG. 20

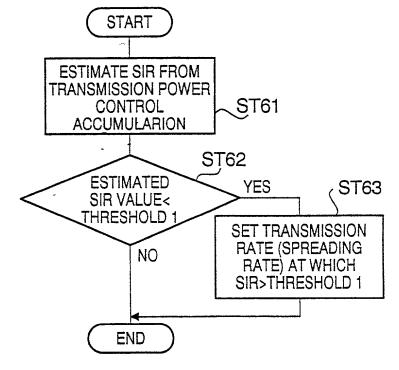
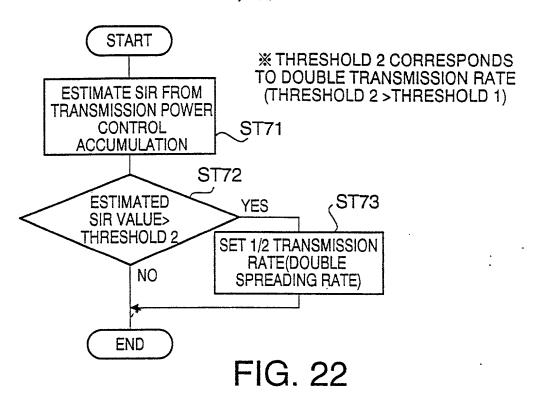
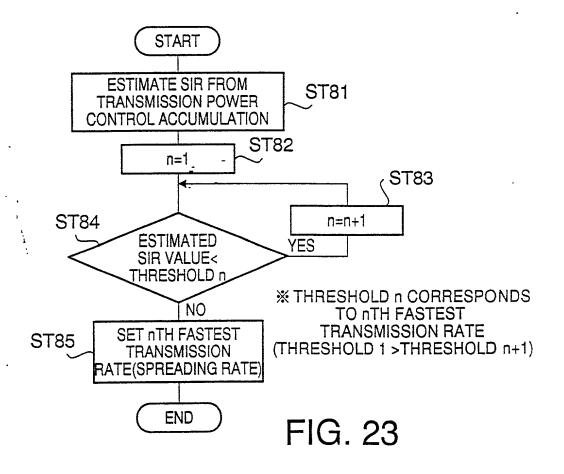


FIG. 21





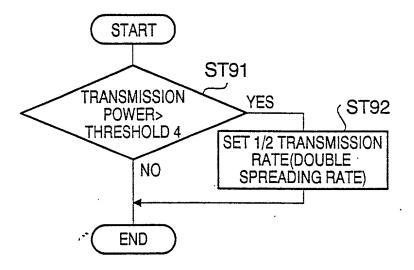


FIG. 24

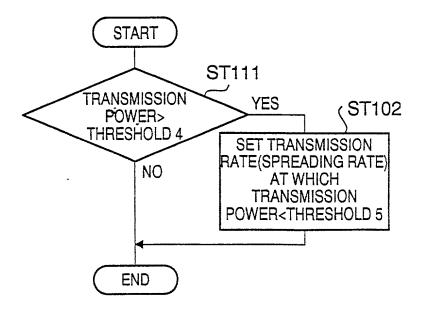
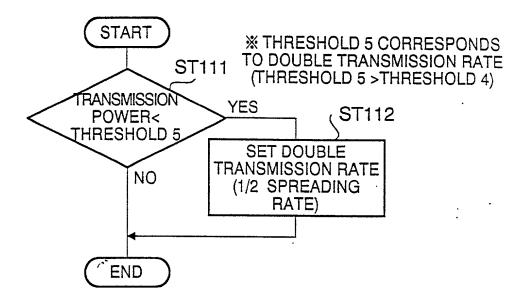


FIG. 25



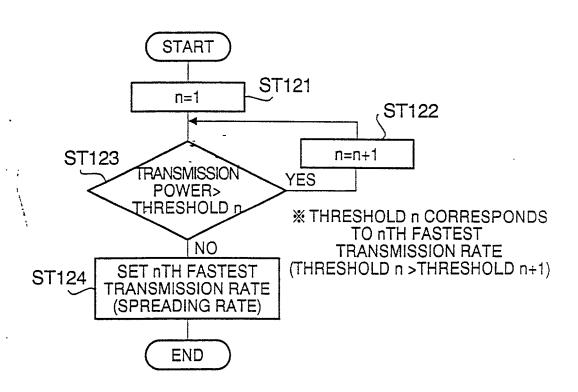
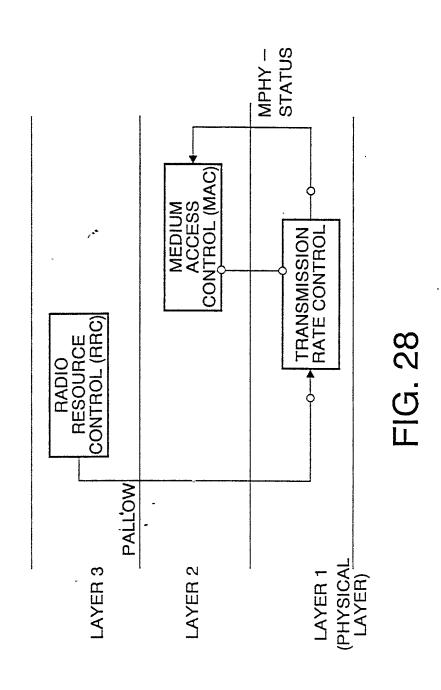


FIG. 27

FIG. 26



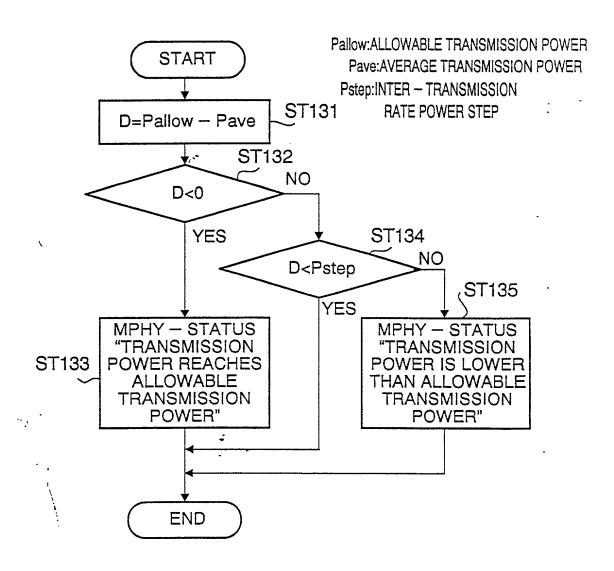


FIG. 29